Instruction Sheet

Kit Number: 79106200

BAGGER ATTACHMENT KIT - 60" DECK



WARNING: FAILURE TO FOLLOW INSTRUCTIONS could result in personal injury and/or damage to unit.


Read, understand, and follow all safety practices in Operator's Manual before beginning.

NOTICE: Refer to the bagger Operator's Manual for additional installation instructions.

Package Contents

Check the contents of your kit for the parts listed below. Also see Figure 1.

Ite	m Description	Qty	Ariens P/N
1	V-Belt	1	07200636
2	Counter Weight Plate	3	04422451
3	1/2-13 x 2 3/4" Hex Bolt	2	05965500
4	17/32" Flat Steel Washer	2	06441900
5	1/2-13" Nylon Locking Flange Nut	2	06500010
6	Baffle	1	04589851
7	3/8-16 x 3/4" Hex Bolt	2	05959400

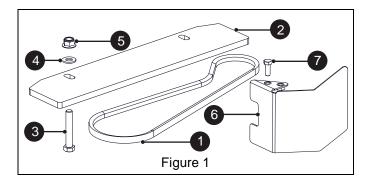


INSTALL COUNTERWEIGHTS




CAUTION: ALWAYS install counterweights before operating unit with bagger attached.

 From under machine position three weight plates (item 2) on top of crossmember below footplate. See Figure 2.

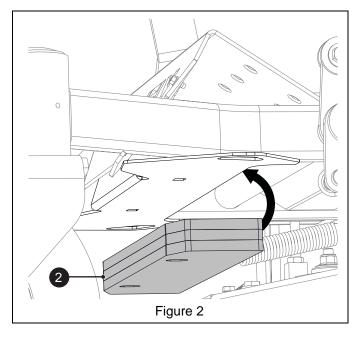


 Secure weight plates with two 1/2 x 2 3/4" hex bolts (item 3), two flat steel washers (item 4) and two 1/2" nylon locking flange nuts (item 5). See Figure 3.

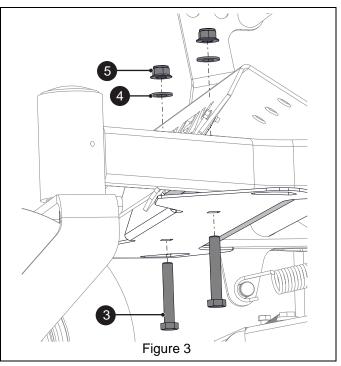


INSTALL FRONT BLOWER BAFFLE

1. Remove and discard hex bolt and nylon locking flange nut from the front of the idler tensioner lever bracket. See Figure 4.

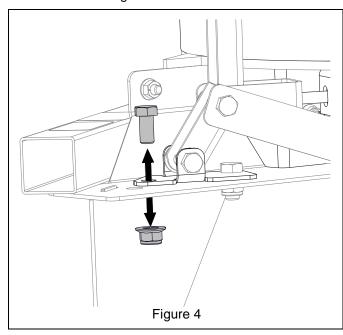


2. Install baffle (item 6) in front of blower housing outlet. Secure with two 3/8 x 3/4" hex bolts (item 7). See Figure 5.

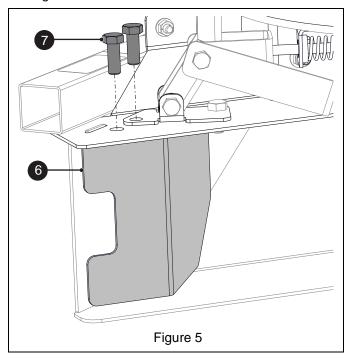

INSTALL V-BELT

See Figure 6.

- 1. Place blower belt tensioner in released position.
- 2. Install V-belt (item 1) around split pulley on blower assembly so that back side of belt contacts idler pulley.

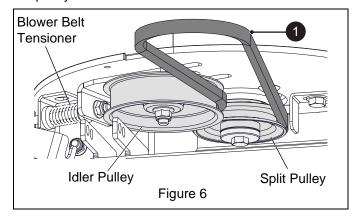

3. Place blower belt tensioner in operating position. **IMPORTANT:** Ensure flat side of V-belt contacts idler pulley and the V-side of V-belt contacts split pulley as shown in Figure 7.

