# **Instruction Sheet**

## Kit Number: 79702400

#### PRO-TURN EV / ZENITH E FRONT WEIGHT KIT




WARNING: FAILURE TO FOLLOW INSTRUCTIONS could result in personal injury and/or damage to unit.

Read, understand, and follow all safety practices in Operator's Manual before beginning.

### **Package Contents**

Check the contents of your kit for the parts listed below. Also see Figure 1.

Item Description		Qty	AriensCo P/N
1	Counter Weight Plate	6	04422451
2	1/2"-13 x 4" Hex Bolt	2	05901734
3	7/32" x 1" Flat Washer	2	06401015
4	1/2"-13 Nylon Locking Flange Nut	2	06500810

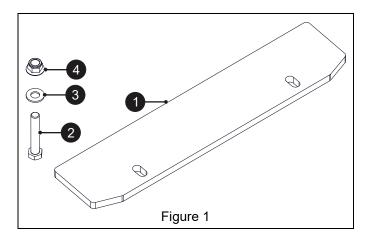


#### **INSTALLATION**




**CAUTION:** AVOID INJURY! ALWAYS remove all batteries from mower before performing any service.

- 1. Park unit on a flat, level surface and engage parking brake.
- 2. Remove key and wait for all moving parts to stop and for hot parts to cool.
- 3. Remove all batteries from mower.

4. Insert five counter weight plates (item 1) one at a time into left footrest opening. Plates are positioned with angled corners facing forward. See Figure 2.

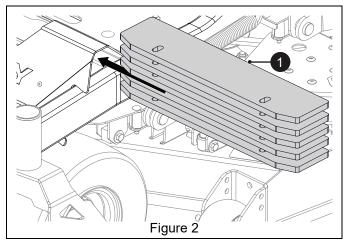

5. Position one counterweight plate under the frame crossmember. Plate is positioned with angled corners facing rearward. Secure weight plates with two 1/2" x 4" hex bolts (item 2), two flat steel washers (item 3) and two 1/2" nylon locking flange nuts (item 4). See Figure 3.

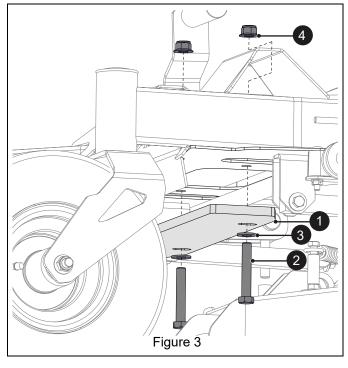

6. Reinstall batteries.