


Installation for Universal Mower Canopy with ROPS

Part # **3641S**




Installation time approximately 20 minutes


## Hardware kit for 3641S

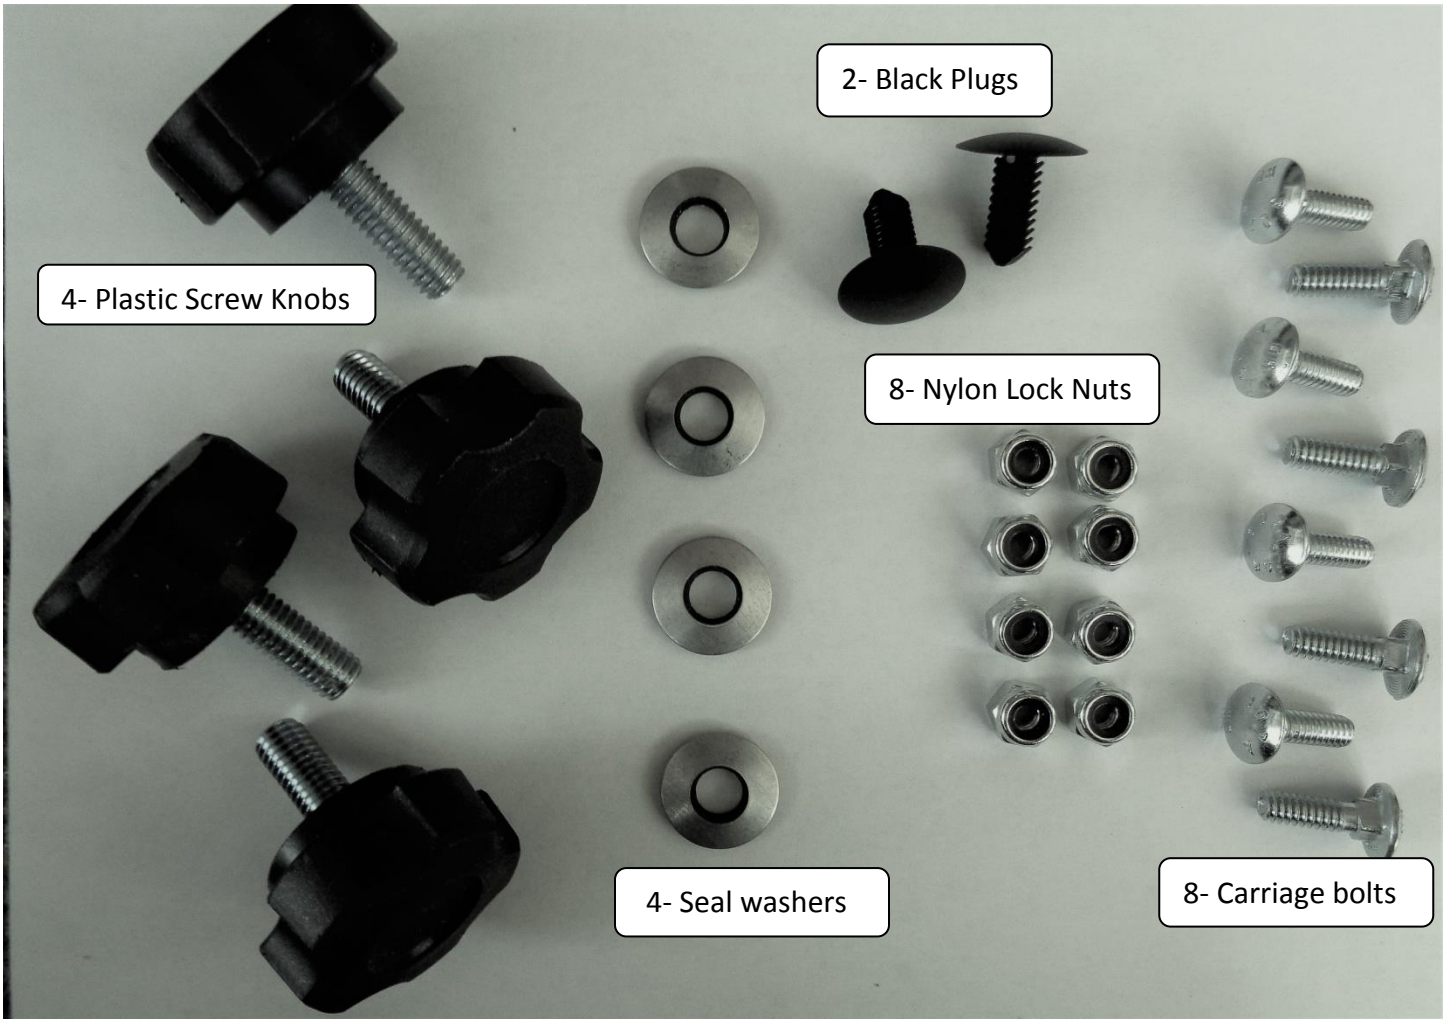


Brackets provided will fit 2"x2", 1.75"x3" and 2"x3" ROPS.

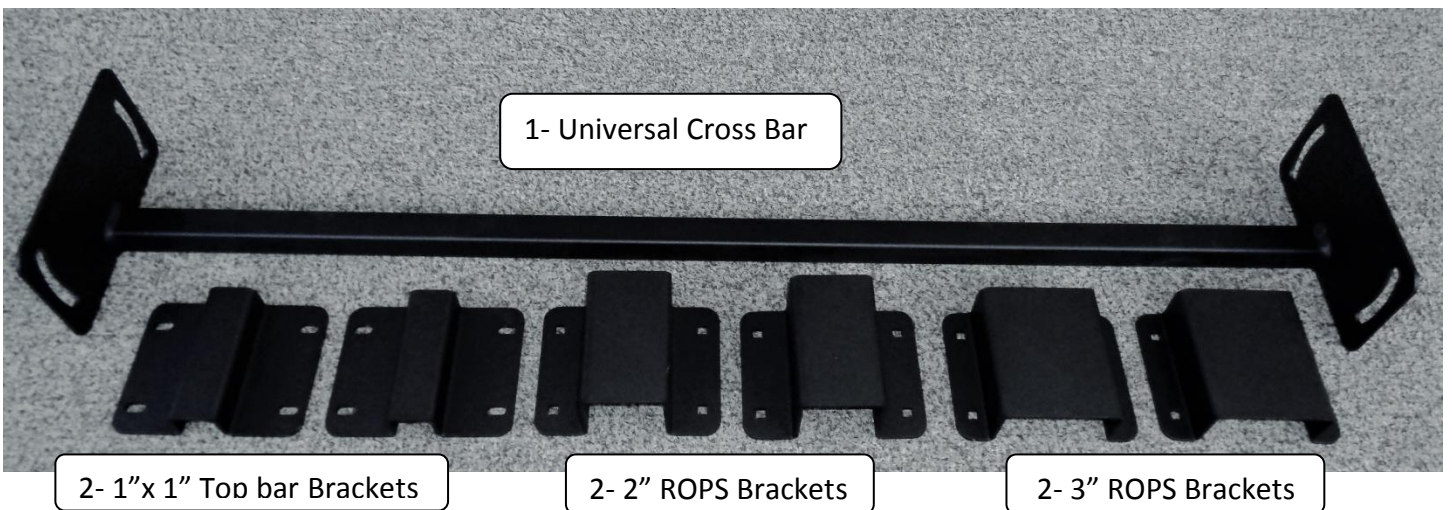



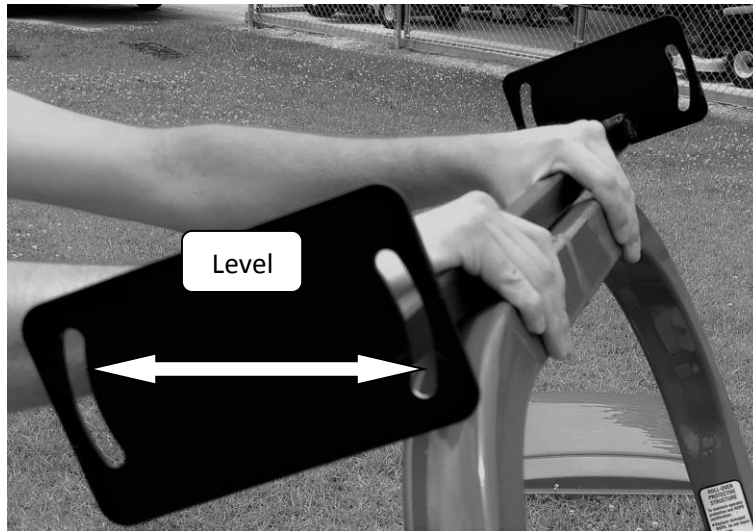

1. Center the universal cross bar on ROPS as pictured. **\*\*Notice slot orientation\*\*** It is important to position slot to level top properly to your model lawn mower.

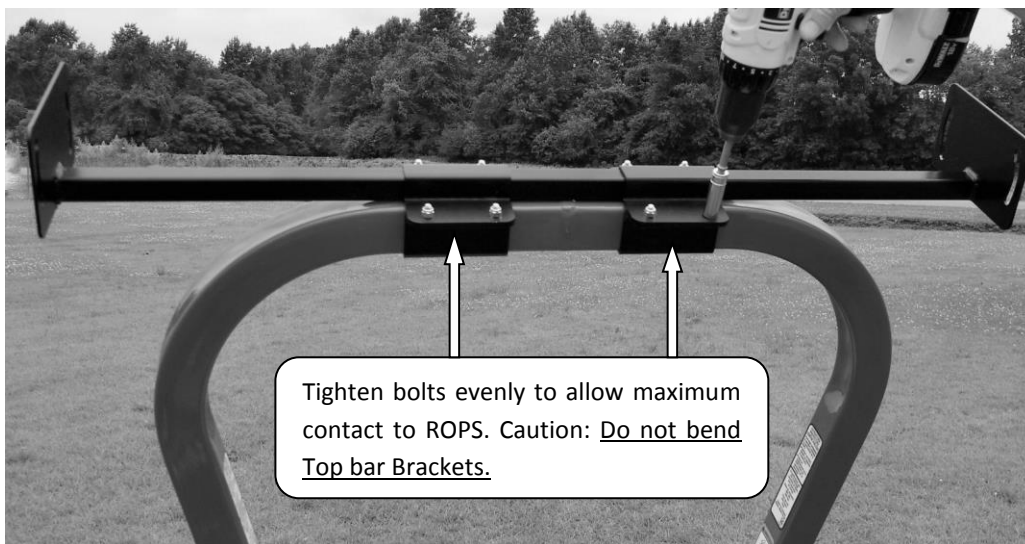

2. Attach using  $\frac{1}{4}$ "-20 carriage bolts,  $\frac{1}{4}$ " lock nuts, 2 -1"x 1" top bar brackets and the correct ROPS brackets as shown. Make sure the universal cross bar is centered and the ROPS brackets are evenly spaced. It is important to tighten the bolts evenly without bending brackets to allow for maximum contact to all surfaces.




Align top on universal cross bar and install with plastic screw knobs




Bracket is designed to fit forward leaning and rear leaning ROPS.

The canopy can be adjusted by user to a forward or aft position for operator's preference. It is important to snug plastic screw knobs securely after adjusting.

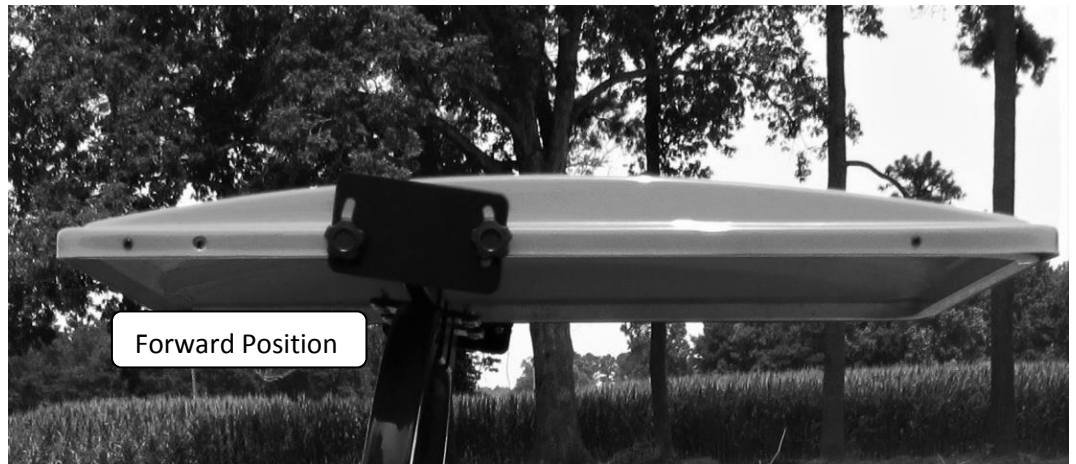

Forward Position

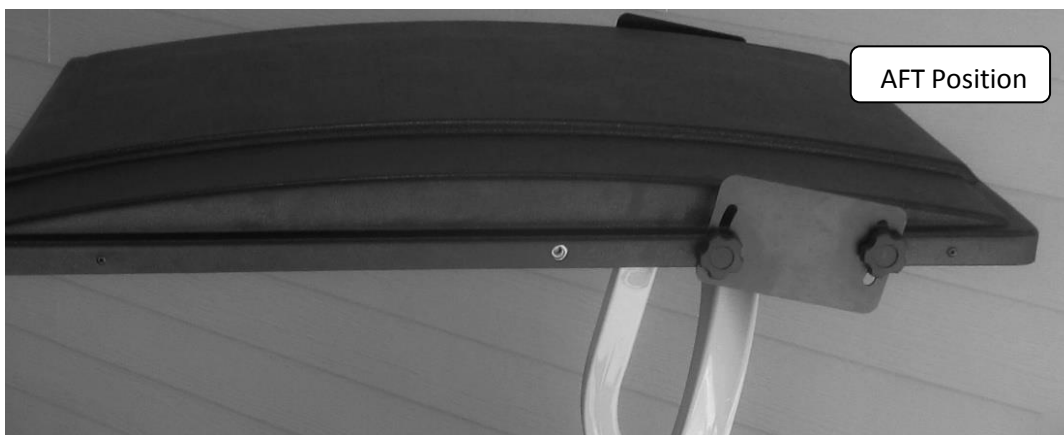

AFT Position

Take five minutes and remove canopy before transporting.

**Eclipse Canopy is Division of ACCU Form Polymers Inc.**

170 Water Tank Road Warsaw, NC 28398 910-293-6961

For Product Support please call Terry Pritchard 919-622-7466 or email [terry@eclipsecanopy.com](mailto:terry@eclipsecanopy.com)