# **Instruction Sheet**

# Kit Number: 79216300

### **BAGGER ATTACHMENT KIT - 52" DECK**



WARNING: FAILURE TO FOLLOW INSTRUCTIONS could result in personal injury and/or damage to unit.


Read, understand, and follow all safety practices in Operator's Manual before beginning.

**NOTICE:** Refer to the bagger Operator's Manual for additional installation instructions.

### **Package Contents**

Check the contents of your kit for the parts listed below. Also see Figure 1.

Item Description		Qty	Ariens P/N
1	V-Belt	1	07200635
2	Counterweight Plate	4	04422451
3	Cast Iron Weight	1	00172000
4	1/2-13" x 5" Hex Bolt	2	05962200
5	17/32" Flat Steel Washer	2	06441900
6	1/2-13" Nylon Locking Flange Nut	2	06500010
7	Baffle	1	04589951
8	3/8-16 x 3/4" Hex Bolt	2	05959400

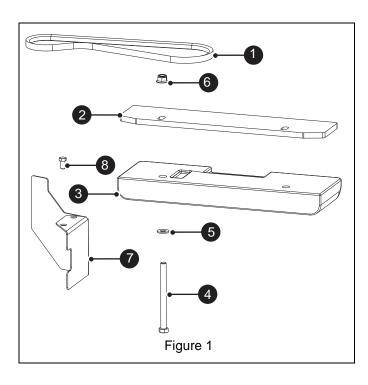


## **INSTALL COUNTERWEIGHTS**




**CAUTION:** ALWAYS install counterweights before operating unit with bagger attached.

1. Open footrest panel. Remove and retain four 5/16" nuts securing foot plate. Remove front two nuts using a socket and extension through slots located on underside. Remove foot plate. See Figure 2.

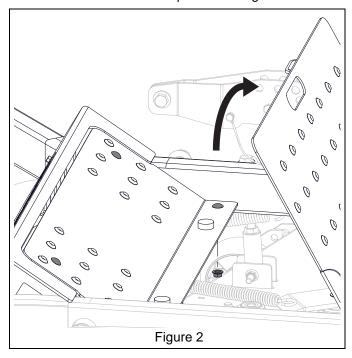

#### See Figure 3.


- 2. From under machine install cast iron weight (item 3) with two 17/32" flat steel washers (item 5) and two 1/2 x 5" hex bolts (item 4).
- 3. From above, install four counterweight plates (item 2) onto two hex bolts. Secure with two 1/2" nylon locking flange nuts (item 6).

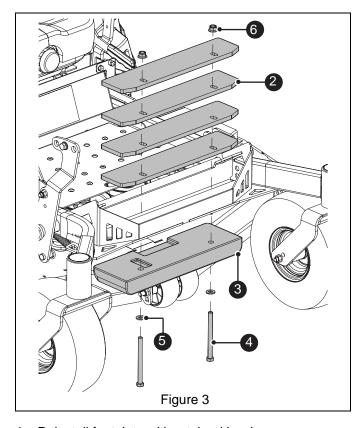


4. Reinstall footplate with retained hardware.

# **INSTALL FRONT BLOWER BAFFLE**

1. Remove and discard front hex bolt and nylon locking flange nut from the idler. See Figure 4.

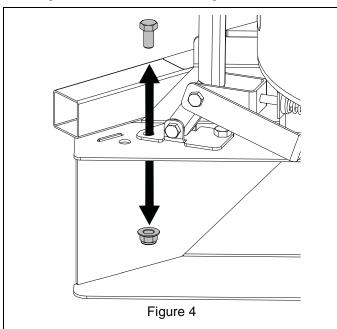


2. Install baffle (item 7) in front of blower housing outlet. Secure with two 3/8 x 3/4" hex bolts (item 8). See Figure 5.

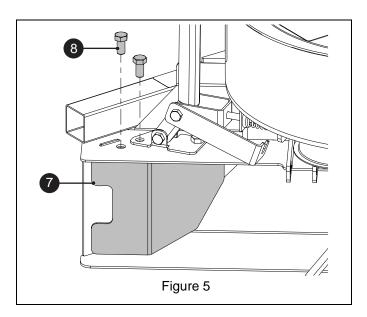

# **INSTALL V-BELT**

See Figure 6.

- 1. Place blower belt tensioner in released position.
- Install V-belt (item 1) around split pulley on blower assembly so that back side of belt contacts idler pulley.

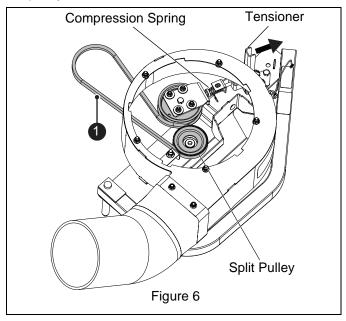

3. Place blower belt tensioner in operating position. **IMPORTANT:** Ensure flat side of V-belt contacts idler pulley and the V-side of V-belt contacts split pulley as shown in Figure 7.

